


A.I Custom View


There are Two methods of getting to the Column Visibility feature.

Navigate through the Menu

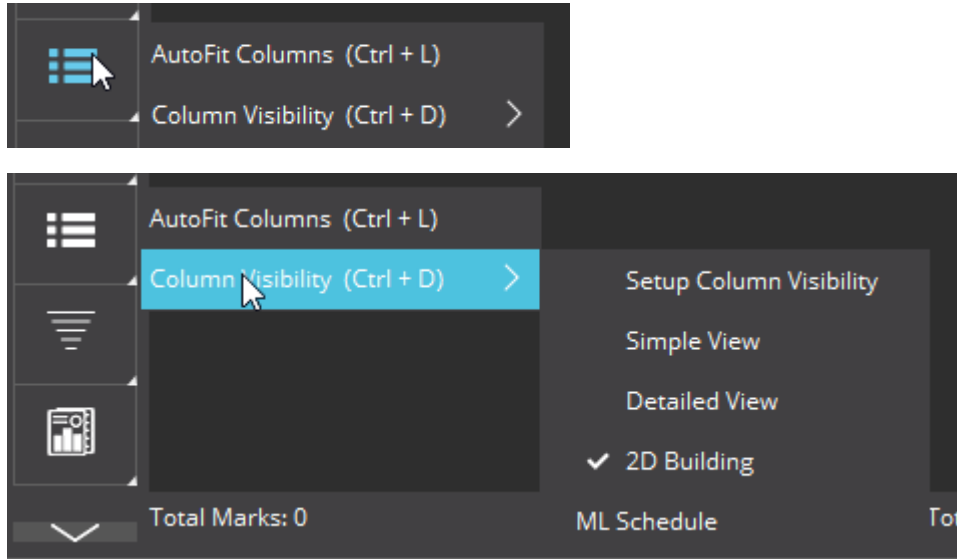

Or


Right Click in any empty cell in the Door Schedule.

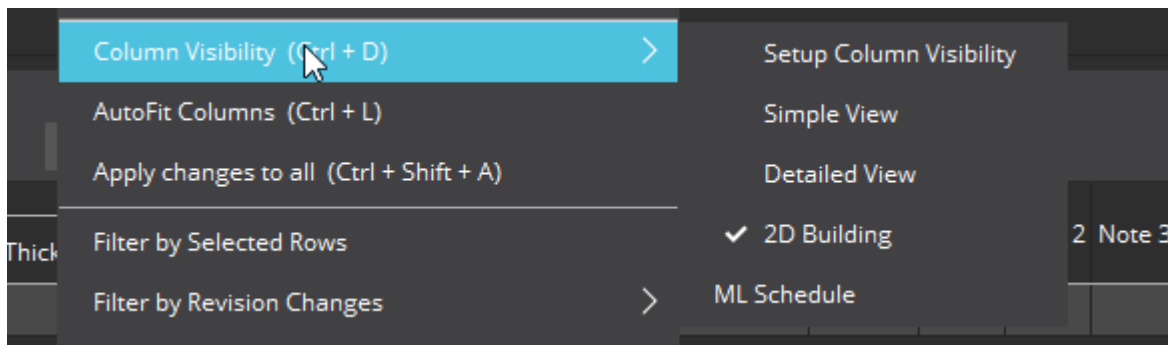

Note: You can create as many custom views as you like. For Simple projects you can turn off or hide unused columns which gives you more real-estate on the screen.

Step 1)


Navigate to Setup Column Visibility

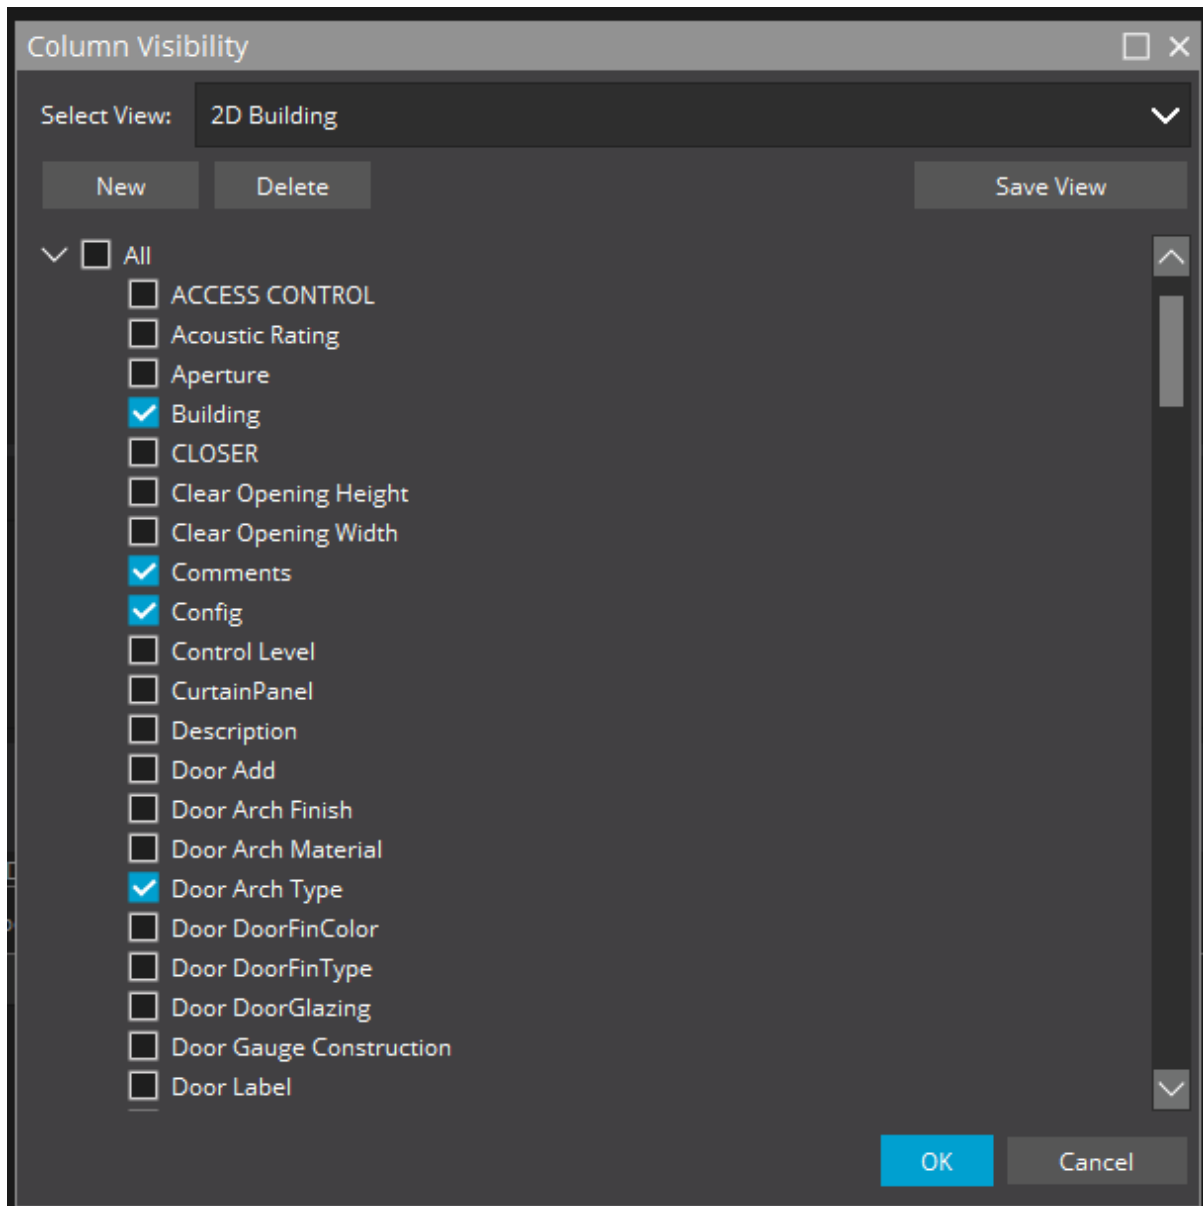

The Last View that you had open will be the one that Loaded as a Template.

Step 2)

Select **NEW** and Give Your New Custom View a Name

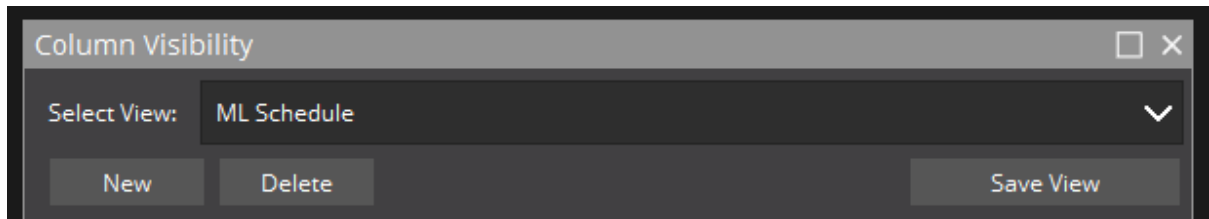

The List of available Columns will be displayed

Note: Openings Studio is Global and Many of these Columns will not be used in Australia. Majority of these Columns do not Print on the Door Hardware Schedule so selecting and using some of these additional columns will only be visible to You.

The **Green Bold Text** is Mandatory Field for the Machine Learning Projects.

The “Y” Selection is an example of a Basic View for a ML Project

Y	ACCESS CONTROL
	Acoustic Rating
	Aperture
Y	Building
Y	CLOSER
	Clear Opening Height
	Clear Opening Width
Y	Comments
Y	Config
	Control Level
	Curtain Panel
	Description
	Door Add
	Door Arch Finish
	Door Arch Material
Y	Door Arch Type
	Door DoorFinColor
	Door DoorFinType
	Door DoorGlazing
	Door Gauge Construction
	Door Label
	Door Liping
	Door Material
	Door Meeting Stile
	Door Piece
	Door Series
	Door Steel Type Species
Y	Door Type
	Door Vendor
	Door Vendor Type
	Elevation
	Export
Y	Ext

Y	Fire Rating
	Frame Add
	Frame Arch Finish
	Frame Arch Material
Y	Frame Arch Type
	Frame Construction
	Frame Depth
	Frame FrameAttachment
	Frame FrameFinColor
	Frame FrameFinType
	Frame FrameType
	Frame Gauge
	Frame Head
	Frame Jamb
	Frame Label
	Frame Material
	Frame Price
	Frame Profile
	Frame Sil
	Frame Steel Type
Y	Frame Type
	Frame Vendor
	Frame Vendor Type
	From Room
	Glass
Y	HWSets
Y	Handing
Y	Height
	ImageIDs
Y	Inactive
	Installed
	Keying
Y	Level
	Louver
	ML2
Y	Mark
Y	Note 1
	Note 2
	Note 3
	Note 4
	Ordered
	Phase
	Punch Out
Y	Qty
Y	RANGE
Y	RFI
Y	ROOM REF
	Received
	Rough Height
	Rough Width
	Security Rating
Y	Smoke Rating
Y	Specifier Remarks
	Standard

	Text 1
	Text 2
	Text 3
	Text 4
	Text 5
Y	Thickness
Y	To Room
	UnderCut
	Usage
	Vision Kit
	Wall Thickness
Y	Width

Make the Column Selections and Click “Save View”

Note: Your **New View** is saved and you can swap between the Openings Studio Generic “Simple View” “Detailed View” and Your **“New View”** at any Time by Navigating through to Column Visibility and Selecting the View from the List.